

S7 & S8 PCD Silent Mode & other settings

In order to access MUTE (Silent mode without vibration), use your finger or stylus to swipe down from the very top of the screen. You should then get a menu like this --->






Swipe down a 2nd time to access more settings --->

Tap on the speaker icon until it changes to Mute.

-OR-

Tap on the word below the speaker icon to get a menu of options:

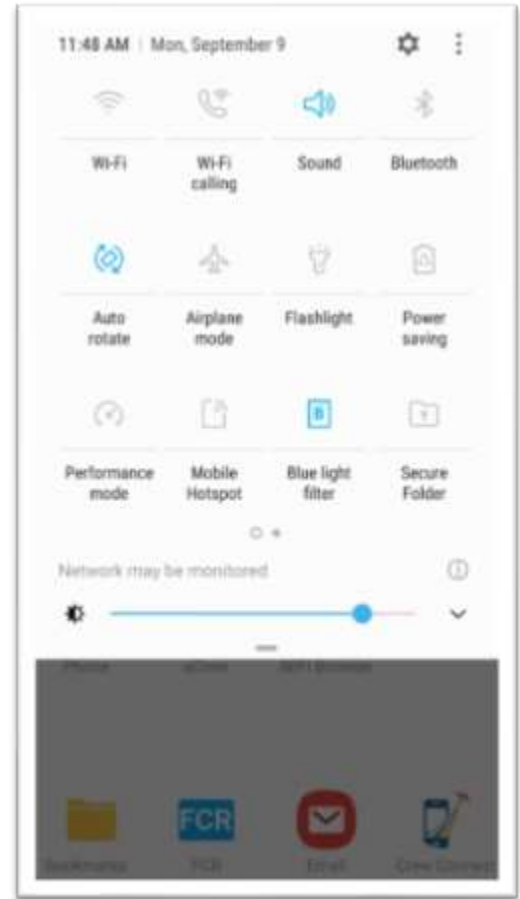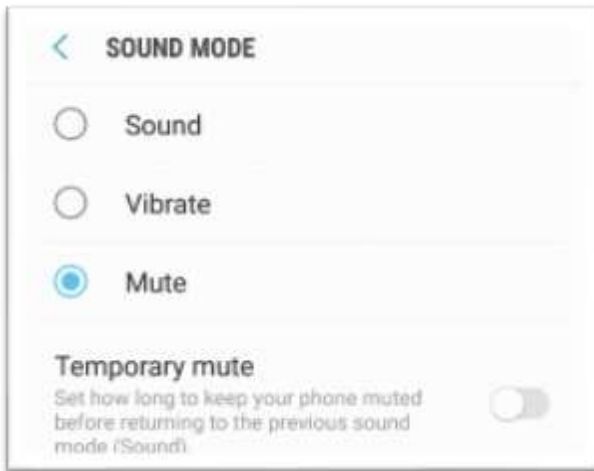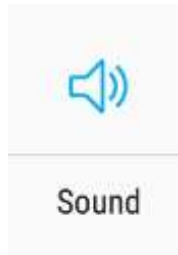

The swipe down menu now gives unrestricted access to other options: Auto rotate, Airplane mode, Flashlight, Performance, Blue light filter, Location (GPS) Always On Display & Do not disturb.

